



Creating Your Two Plumbing Openings

We do not pre-set the plumbing openings in your pool because they are never in the right place for customer's needs. As a result, we have developed this very simple, step-by-step openings creation guideline.

TOOLS REQUIRED: You will need the following tools. A ruler, a sharp Exacto-style knife, a pen, and the wall-fitting nut.

STEP 1: Using your ruler, measure out 15 inches from the corner of the pool. Your starting point is the center of the corner, your guide will be the double ridge weld going horizontal along the pool liner. The direction is away from the corner. Make a mark with your pen (we'll call this mark "A").


STEP 2: Next, measure down 14 inches. Your starting point is mark "A" at the weld edge, the direction is away from the weld edge towards the pool wall base. Make a mark with your pen (we'll call this mark "B").

STEP 3: Place the Wall-Fitting Nut so that mark "B" is centered within the opening of the Wall-Fitting Nut. Use your pen and trace the opening of the Nut from the inside.

NOTE: The diameter of this circle, should be 2 3/8s (two and three eighths).

STEP 4: If your measurements are correct, then you can follow the circle and cut out the material to create the first opening.

STEP 5: Your next measurement will go on the other side of the corner. Repeat steps 1 through 4.

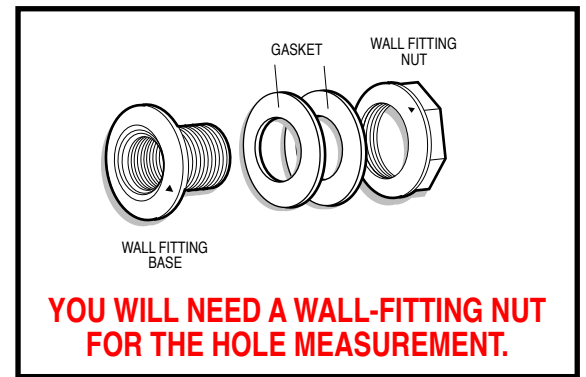

Generally customers place the openings on a corner of the pool. Just be sure to point the WATER FLOW DIRECTOR to the opposite end.

